




## VIP-Multi-shortening claw VMVK

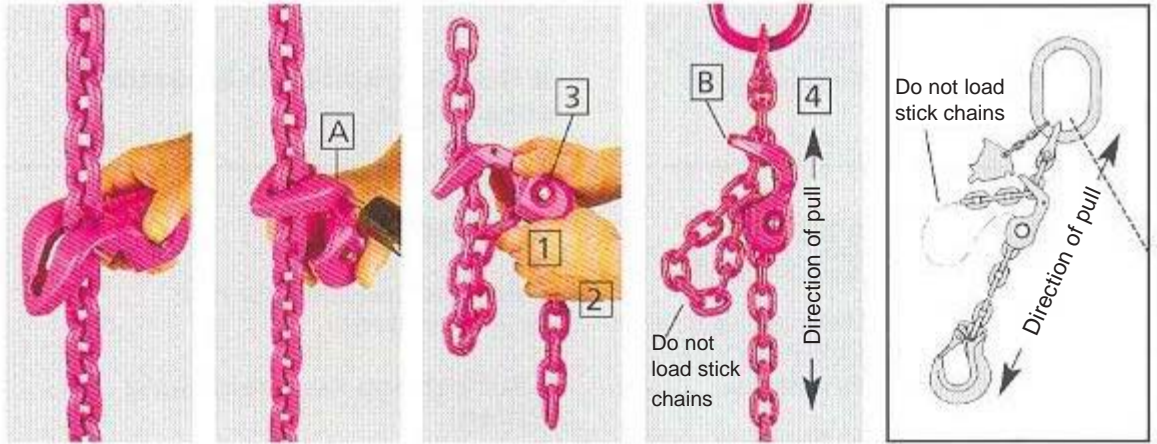

### Fitting:

Pull loose chain strand through the crucifix. Secure the chain in the looking pocket at the required position and drive in the retaining pin.

**A**. Thus the multi shortening claw is fixed in the VIP chain strand. It is preferable to fit and secure on the third chain link down for maximum adjustment. Slide the chain into the slot and secure.

### Handling:

Laterally swing out VMVK. With the chain strand slack, insert the required chain link into the pocket of the VMVK **1**, pull down chain strand **2**. If required depress securing bolt. Securing bolt locks automatically. Check locking. For unlocking, reverse procedure. Depress securing bolt **3** at the same time.

### Attention:

If the VMVK **A** is used without securing bolt the chain must always be completely seated in the locking slot **B** ! When pulling / fitting the shortened chain assembly attention must be paid to ensure that the chain remains in the locking slot **B** until the lift has been completed.

### User advice

It makes it easier for a chain basket assembly.

